



Dedicated to bringing you healthy indoor air

## Operating, Filter Replacement and Bulk Carbon Refill Directions

### The 5000 - 6000 Series Air Purifiers



#### To Begin Using the Air Purifier

- Wipe the unit with a damp cloth.
- Plug the unit into a grounded 110 outlet.
- Turn the unit on at **TURBO** and let it run for a moment.
- Place the unit in the desired area and set at **HIGH** for regular daytime use and at **LOW** for overnight.
- The most effective way to use the air purifier is to run it on low 24 hours a day 7 days a week.


#### Filter Change Times

- HEPA filter: 3 to 5 years depending on use.
- Carbon filter: As needed. Maximum in normal conditions: 18 months to 2 years.
- Pre-filter: vacuum every 1 or 2 months. Replaced when necessary.

#### Warning


- Before removing the top or bottom off the unit for any reason, unplug the unit.
- Do not allow any object to be stuck or poked into any opening of the unit. (i.e. louvers or control knob.)

#### To Replace or Clean the Pre-filter

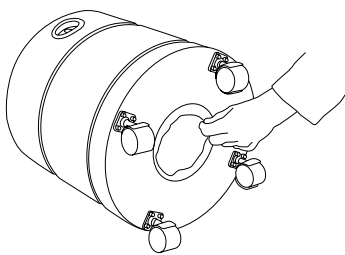

##### STEP A

Turn off the unit.  
Unplug the unit.  
Gently tilt over the unit.

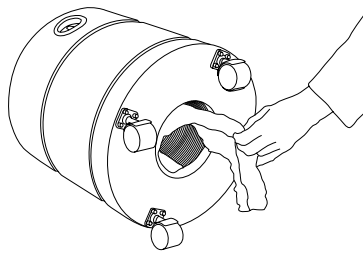

##### STEP B


Remove the pre-filter gently to avoid disturbing the dust on it.

##### Either

Vacuum the pre-filter on both sides and replace.

##### Or

Place the old pre-filter in a plastic bag and dispose of it according to local regulations.

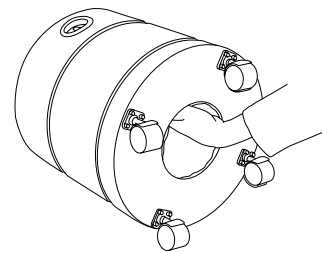

##### STEP C

Replace the new or cleaned pre-filter by gently pressing against inner carbon filter.  
Gently return the unit to the upright position.


Quick Start\_Bulk car\_741R01

**HEPA Replacement and Carbon Canister refill directions on pages 2, 3 and 4**


### HEPA Filter Replacement and Carbon Canister Refill

- The carbon canister will need to be refilled more often than the HEPA filter will need to be replaced.
- To refill the **Carbon Canister only**, follow steps 1 to 5 and then steps 7 to 18.
- To change the **HEPA filter only**, follow steps 1 to 6 and then steps 15 to 18.
- To change the **HEPA filter** and refill the **Carbon Canister** follow steps 1 to 18.

### To Remove Carbon Canister

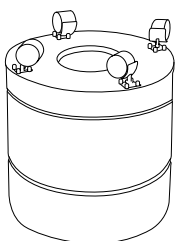


**STEP 1**  
Turn power off and  
Unplug the unit.  
Lay unit up-side down.

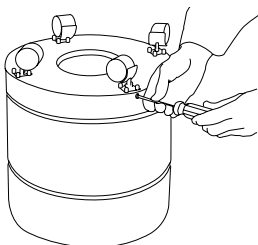

**STEP 2**  
Remove all four screws  
with a screwdriver.



**STEP 3**  
Gently grasp wheels.

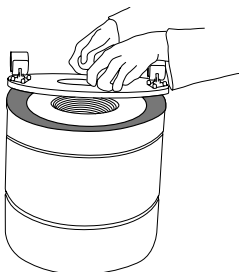

**STEP 4**  
Remove base by gently  
pulling on the wheels.




**STEP 5**  
First remove the **Carbon  
filter** by placing thumbs on  
the inner side of the filter.  
Then pull up gently  
to remove filter.

To refill the  
Carbon Canister  
without changing  
the HEPA filter,  
go to **STEP 7**  
on page 3.

### To replace the HEPA filter

To replace the  
HEPA filter, follow  
**STEPS 1 to 5**  
(above) and then  
**STEP 6.**

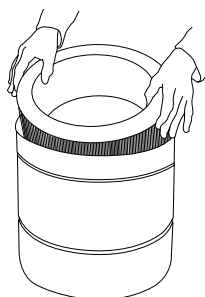


**STEP 6**  
Remove the **HEPA filter**  
by placing thumbs on the  
inner side of the filter  
and grip the filter.

To continue changing  
the HEPA Filter  
without refilling  
the Carbon canister  
go to **STEP 16**  
on page 4.


**When ordering replacement bulk carbon please state the exact blend required.**




**Refilling Carbon Canister with New Bulk Carbon**

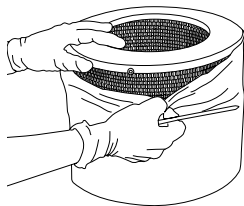


**STEP 7**  
Pull back pre-filter slightly, remove screws from top of filter.

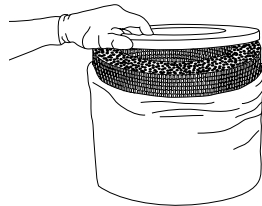


**STEP 8**  
Remove carbon filter lid.

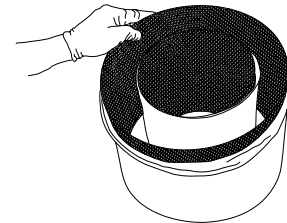


**STEP 9**  
Pour out old bulk carbon until totally empty.

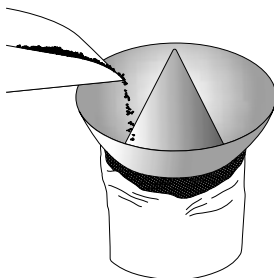

**STEP 10**  
Pour the new bulk carbon into the carbon canister.  
Use a custom refill funnel from AllerAir. Save time and spillage and ensure an even distribution of carbon. Available from AllerAir. Call toll free: 1-800-626-0664

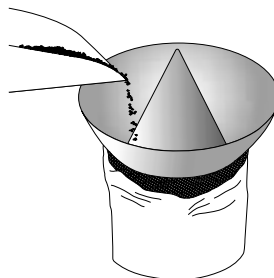


**STEP 11**  
While pouring in the new bulk carbon, tap the side of the carbon canister with a rubber mallet to compact the carbon.

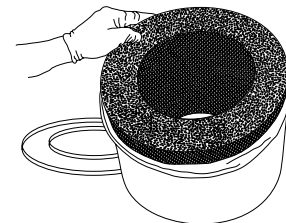


**STEP 12**  
New bulk carbon should be filled flush with the top of the canister.



**STEP 13**  
Put lid back on and align the holes with pre-drilled holes on the canister.

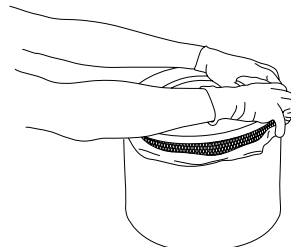

**STEP 14**  
Press down on the lid until securely tight.

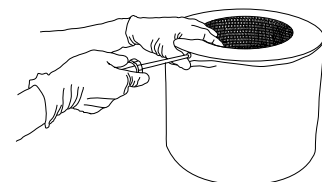

**STEP 15**  
Put back the screws in the pre-drilled holes.




**To Replace HEPA Filter and the Carbon Canister**




**STEP 16**  
Replace the HEPA filter.




**STEP 17**  
Replace the Carbon Canister  
inside the HEPA filter.

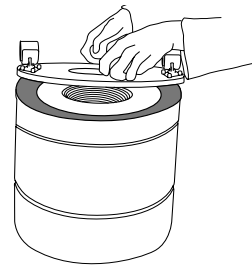

**STEP 18**  
Place the lid back  
in position by  
aligning the  
screw holes.

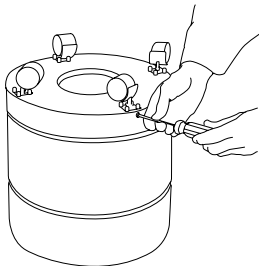

**STEP 19**  
Replace the screws.  
Tighten them with  
a screwdriver.

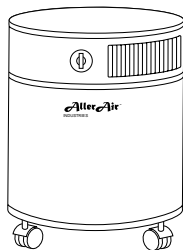

**STEP 20**  
Gently return the unit  
to the upright position.